



ASTRA INDUSTRIES SAL

NOTICE

ASTRA ASR 1x4 Watts

Installation Notice (English)

- A Square opening of 7 x 7 or a Round opening of 9 cm diameter must be prepared in advance in the false ceiling.
- Insert the unit into the opening, the fixing springs previously tense up to beat back automatically after installation of the luminaire. (Photo1)
- Make a primary test to the AC current. (110-240 Volts, 50-60 HTZ) (Photo 2)

Caution:

- It is imperative to connect this electronic device to the earth line.
- Do not plug and unplug this apparatus in a fast and inappropriate manner in a short period of time, this could damage the electronic driver.
- All maintenance operation must be made by a technician.
- Keep 2 cm space above the heat sink on the top of the fitting.
- Do not arc weld on the same AC line.
- The acetic acid destroys the diode. (Acetic acid is vinegar and several glues in the market, or silicone contain this material)
- Do not invert the low-voltage electrical wire between the driver and the LED.
- This LED luminaire is intended to be installed by a professional only.

Warranty:

- A 2-year warranty is offered by ASTRA for the diode and 6 months for the Constant Current Driver. On condition that the installation is correct.



PHOTO 1

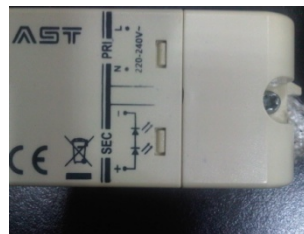


PHOTO 2