



ASTRA INDUSTRIES SAL

NOTICE
ASTRA MLC 12 Watts

Installation Notice (English)


- Remove the plastic hole on the cover (picture 1)



- Introduce any small tool and pull out the cover.
- On the left and right side of the fittings there is an opening for the electrical wire
- Introduce your wire and plug the wires to the connectors. (picture 2)



- Screw the fitting to the ceiling, or suspend it with stainless steel wires (Provided separately by Astra on request).
- To install recessed in the false ceiling, a box must be prepared previously.(picture 3)

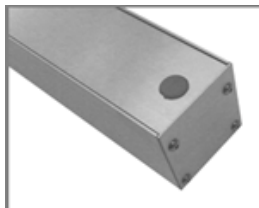

- Plug on the fitting to the current (110 to 240 volts 50-60 htz)

Caution:

- It is imperative to connect this electronic device to the earth line.
- Do not plug and unplug this apparatus in a fast and inappropriate manner in a short period of time, this could damage the electronic driver.
- All maintenance operation must be made by a technician.
- Keep 2 cm space above the heat sink on the top of the fitting.
- Do not arc weld on the same AC line.
- The acetic acid destroys the diode. (Acetic acid is vinegar and several glues in the market, or silicone contain this material)
- Do not invert the low-voltage electrical wire between the driver and the LED.
- This LED luminaire is intended to be installed by a professional only.

Warranty:

- A 2-year warranty is offered by ASTRA for the diode and 6 months for the Constant Current Driver.
On condition that the installation is correct.